

4.3.7 E-mail(SMTP) Settings

Enable Email: Set e-mail function ON/OFF.

Sender: Set sender's name or email address

Sender's email: Set sender's email address.

Receiver: Set receiver's email box. (Supports 3 receivers' emails simultaneously)

SMTP Server: The sender address SMTP server.

SMTP Port: The sender's SMTP Port, usually is 25, some SMTP servers have their own port, e.g., the smtp port for Gmail is 465. (We suggest you use Yahoo Email)

Auth User: Verify the user settings.

SMTP Username: Set sender's user name or email address.

SMTP password: Set sender's email address password.

Note: User can save the settings first, then click Test button to see if settings working. If not, pls double check your settings or spelling.

Note: We suggest you use **Yahoo Email** and it is very convenient for you to use and no need do other setting on the Email Backstage

		Save	Refresh	Test
Enable E-mail	<input checked="" type="checkbox"/>			
Sender	<input type="text" value="2879745181@qq.com"/>			
Sender Email	<input type="text" value="2879745181@qq.com"/>			
Receiver1	<input type="text" value="2879745181@qq.com"/>			
Receiver2	<input type="text" value="yjc824944817@163.com"/>			
Receiver3	<input type="text"/>			
SMTP Server	<input type="text" value="smtp.qq.com"/> <input type="checkbox"/> SSL Login			
SMTP Port	<input type="text" value="25"/>			
Auth User	<input checked="" type="checkbox"/>			
SMTP Username	<input type="text" value="2879745181@qq.com"/>			
SMTP Password	<input type="password" value="....."/>			

Pls save first then test